

SINGER
FM-17/CM-17/FM-22

PART LIST SUPPLEMENT

For FM-17, CM-17 and FM-22 Models

REF.	PART NBR.	PAGE NBR.	DESCRIPTION	F M 1 7	C M 1 7	F M 2 2
01	356811-075	07/08	ARM TOP COVER COMPLETE	X		
01	356811-076	07/08	ARM TOP COVER COMPLETE			X
01	356811-078	07/08	ARM TOP COVER COMPLETE		X	
09	446450-158	09/10	END COVER	X		
09	446450-159	09/10	END COVER			X
09	446450-171	09/10	END COVER		X	
08	356997-451	33/34	FEED REGULATOR CAM COMPLETE	X		
11	356115-452	33/34	REVERSE BUTTON	X		
11	356653-456	33/34	REVERSE BUTTON		X	X
08	357010-932	35/36	BUTTONHOLER AND FEED REGULATOR CAM COMPLETE			X
08	357012-931	35/36	BUTTONHOLER AND FEED REGULATOR CAM COMPLETE		X	

☆ THIS SUPPLEMENT IS TO BE CONSIDERED IN CONJUNCTION WITH COMPLETE PARTS LIST (P/N 357092-001) FOR SM-14 / DL-17 / 7025 MODELS.

by
SINGER

TECHNICAL PUBLICATIONS - PRODUCT ENGINEERING - SINGER DO BRASIL - CAMPINAS